

High Voltage Differential Probes

DP6000D Series

DP6070D 700V_{pk}/500MHz

DP6150D 1500V_{pk}/500MHz

DP6350D 3500V_{pk}/500MHz

DP6700D 7000V_{pk}/500MHz



ShenZhen ZhiYong Electronics Co., Ltd

Introduction

First of all, thank you for purchasing our products, this instruction manual is the description about the function, usage, operation attention points, etc. Before use, please read the instructions carefully and use correctly.

Manual annotation will use the following symbols to distinguish.



This symbol means it is harmful to the machine and human body; you must strictly follow the instruction manual to operate.

Warning

In the case of wrong operation, the user risk injury. The content under this mark records the relevant matters needing attention to avoid such dangers.

Notice

The user may suffer minor injuries and material damage with the wrong operation. To avoid such situation, the matters under this mark need

Note

This symbolizes important note about how to use the machine.

To the safely use the machine, you must abide by the following safety precautions strictly. The violation against the manual is likely to damage the protective function of the machine. In addition, the company is not responsible for any safety problem caused by the violation of matters needing attention in operation.



- Please be careful to the danger of electric shock and pay attention to highest input voltage.
- Do not operate in wet or combustible conditions.
- Make sure the circuit under test is turned off before access it to the probe.
- Turn off the circuit after the measurement, and then remove the probe.
- When BNC lines are connected to the oscilloscope or other devices, ensure the BNC terminal is well grounded.
- Please check the probe skin. If there is any breakage, stop using it immediately.
- Select the product standard adapter power supply.

DP6000D Series Brief Description

Modal	Maximum Input Differential Voltage (Vp)	Bandwidth	Attenuation
DP6070D	± 700V	500MHz	20X/200X
DP6150D	± 1500V	500MHz	100X/1000X
DP6350D	± 3500V	500MHz	200X/2000X
DP6700D	± 7000V	500MHz	200X/2000X

1. Summary

- DP6000D Series High Voltage Differential Probe is designed with floating measurement function, with a maximum bandwidth up to 500MHz that can fulfill the need of most measuring system.
- DP6000D Series provides a wide measuring range for selection, and its differential measurement voltage range can meet the requirement of most measurement circuit.
- The users can enter the test mode to adjust the offset voltage of the probe and realize zero set.
- DP6000D Series provides a 5MHz bandwidth limit function. 5MHz frequency bandwidth can meet the measurement of the switching frequency of most FETs in switching power supplies, and can filter out higher frequency noise and interference.
- DP6000D Series has sound & light alarming function, and users can turn it off manually if needed.
- DP6000D Series is powered by USB connector, and it contains standard BNC output connector that can adapt oscilloscope of any brand. **In which, requires oscilloscope input impedance set to 50 Ω (recommended) or connecting a through type 50 Ω load while setting the input impedance to 1M Ω .**
- The probe has good CMRR, with high input impedance and low capacitance at the input end, which can accurately and quickly measure differential voltage signals. It can be widely used in the research and development, debugging, or maintenance of switching power supplies, frequency converters, electronic ballasts, variable frequency household appliances, and other electrical power devices.


2. Application

- ◆ Floating voltage measurement
- ◆ Inverter
- ◆ Switch Power Supply
- ◆ Welding, plating power supply
- ◆ Induction heating, electromagnetic oven
- ◆ Motor driver design
- ◆ Electronic ballast design
- ◆ CRT display design
- ◆ Inverting, UPS power supply
- ◆ Inverter appliance
- ◆ Power conversion and related design
- ◆ Experiment of electrical engineering
- ◆ Low voltage test
- ◆ Power electronics and power transmission experiment, etc

3. Products and Accessories

■ Main part of probe

As DP6150D for example, different voltage, range, bandwidth would be in different product.

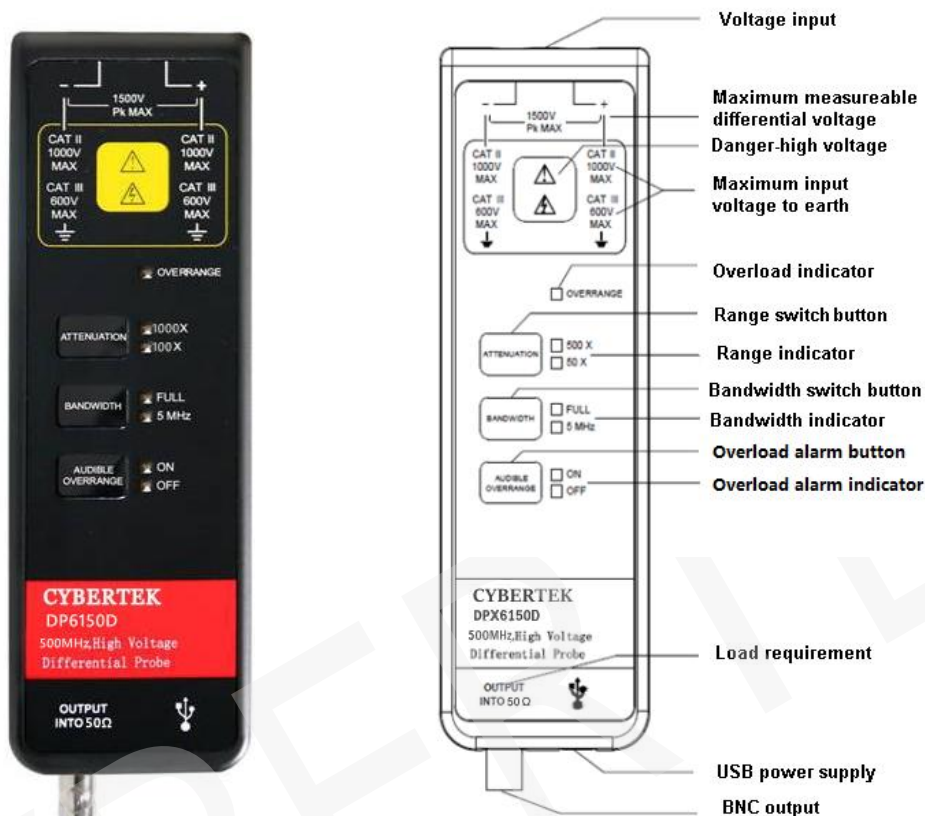

Detailed instructions

- ✧ Integral input leads: The integral input leads extend 28cm from the probe body. Connect the leads directly to your circuit, or use the extender leads and other accessories.
- ✧ ATTENUATION: Different attenuation indicates different ranges, such as DP6150D: 1000X, indicate the maximum test voltage is 1500V. 100X presents maximum test voltage is 150V. DP6700D: 2000X shows maximum test voltage is 7000V. 200X indicate maximum test voltage is 700V; oscilloscope attenuation factor should be set accordingly based on the probe attenuation selection.
- ✧ BANDWIDTH: The series products have bandwidth selection function; the default is full bandwidth (FULL) of the product. When testing low frequency signal, you can choose 5MHz bandwidth limit to prevent being interfered by high frequency signal.
- ✧ AUDIBLE OVERRANGE: When test range exceeds probe range, audible and visual alarm will start; the function is to control buzzer alarm on or off, ON is to open audible alarm and OFF closes the alarm.
- ✧ Output connector: Standard BNC output connectors, can be connected to any oscilloscope of any brand. requires the input impedance of the oscilloscope set to $50\ \Omega$ (recommended), or connect with standard through type $50\ \Omega$ load and set the input impedance to $1M\ \Omega$.
- ✧ Power interface: Standard USB type B interface, supply power with standard USB adapter, can be supplied by oscilloscope, easy to use, also can be supplied by portable power source, convenient for outdoor test.
- ✧ Factory Setting: The default factory setting is high attenuation ratio, FULL bandwidth, audible alarm

is on. The product has automatic memory, automatically save the state before power off.


■ Accessories Description




Alligator Clips (CK-261 red one pair)




Alligator Clips (CK-262 one pair)




Pincer Clips (CK-281 one pair)




Hook Clips (CK-284A one pair)




Extender Leads (CK-301 one pair)



BNC Output Line(CK-310)



USB line (CK-315B AM-BM, 1.5m)

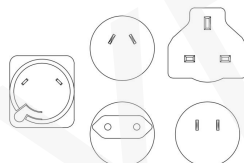

Power adapter (CK-605A) USB 5V/1A



Thorough type 50Ω load(CK-50)



Banana jack (CK-293)

Product standard accessories description:

Modal	DP6070D	DP6150D	DP6350D	DP6700D
Alligator Clips(CK-261)	CATIII 1000V CATIV 600V			---
Alligator Clips(CK-262)	---			CATIII 1000V CATIV 600V
Pincer Clips(CK-281)	CATIII 1000V			
Hook Clips(CK-284A)	CATIII 1000V			
Extender Leads (CK-301)	CATIII 1000V			
Banana jack (CK-293)	Φ4mm			
BNC Output Line(CK-310)	Double-ended BNC connector coaxial line			1m
USB Line (CK-315B)	1.5m			
Power Adapter (CK-605A)	USB 5V/1A			
Thorough type 50Ω load(CK-50)	50Ω 1W			

NOTE: The above "--" refers to non-standard accessory of this model.

4. Electric Specification

Model1		DP6070D		DP6150D		DP6350D		DP6700D	
Bandwidth(-3dB)		500MHz							
Rise time		≤700ps							
Accuracy		±2%							
Range selection (Attenuation rate)		20X/200X		100X/1000X		200X/2000X		200X/2000X	
Maximum differential voltage(DC + Peak AC)		20X	±70V	100X	±150V	200X	±350V	200X	±700V
		200X	±700V	1000X	±1500V	2000X	±3500V	2000X	±7000V
Common mode voltage (Vp) (DC + Peak AC)		±700V		±1500V		±3500V		±7000V	
Maximum differential mode VS frequency curve		Reference Figure 1		Figure 2		Figure 3		Figure 4	
Maximum input voltage-to-earth (Vrms)		450V CATII 600V CATI*		600V CATIII 1000V CATII		600V CATIII 1000V CATII		1000V CATIII 2300V CATI*	
Input impedance	Single-ended to ground	2.5MΩ		5MΩ		5MΩ		20MΩ	
	Between inputs	5MΩ		10MΩ		10MΩ		40MΩ	
Input capacitance	Single-ended to ground	<4pF		<4pF		<4pF		<5pF	
	Between inputs	<2pF		<2pF		<2pF		<2.5pF	
CMRR	DC	>80dB		>80dB		>80dB		>80dB	
	100kHz	>60dB		>60dB		>60dB		>60dB	
	1MHz	>50dB		>50dB		>50dB		>50dB	
Noise(Vrms)		20X	<90mV	100X	<200mV	200X	<350mV	200X	<625mV
		200X	<130mV	1000X	<420mV	2000X	<730mV	2000X	<1V
Differential overvoltage detection level		20X	≥70V	100X	≥150V	200X	≥350V	200X	≥700V
		200X	≥700V	1000X	≥1500V	2000X	≥3500V	2000X	≥7000V
Propagation time	Probe	20X	5.6ns	100X	5.5ns	200X	5.3ns	200X	5.6ns
		200X	4.9ns	1000X	4.5ns	2000X	4.5ns	2000X	4.6ns
	BNC Line(1m)	About 5ns							
Bandwidth limit filters (5MHz)		≥-3dB@5MHz							
Overload indicator (red light)		Yes							
Overload alarm		Yes(Can shut up manually)							
Automatic save		Yes							
Offset setting function		Yes (Set in test mode)							
Terminate load		50Ω							
Power supply		USB 5V/1A adapter							
Safety standard		EN61010-1: 2010							
EMC standard		EN61326-1:2013 EN61000-3-2:2006+A1:2009+A2:2009 EN61000-3-3:2013							

*CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurements Category per IEC/EN 61010-031:2015 + AMD1:2018.

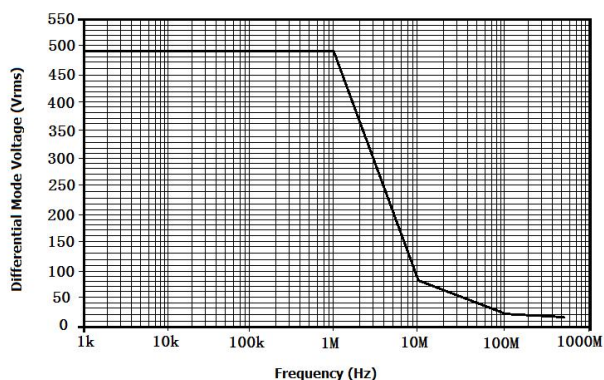


Figure 1:DP6070D Differential Mode Voltage VS Frequency

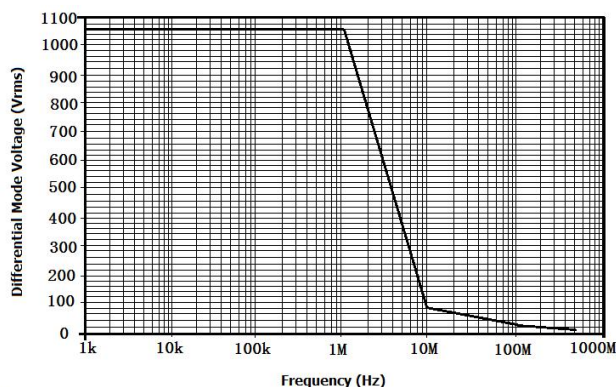


Figure 2:DP6150D Differential Mode Voltage VS Frequency

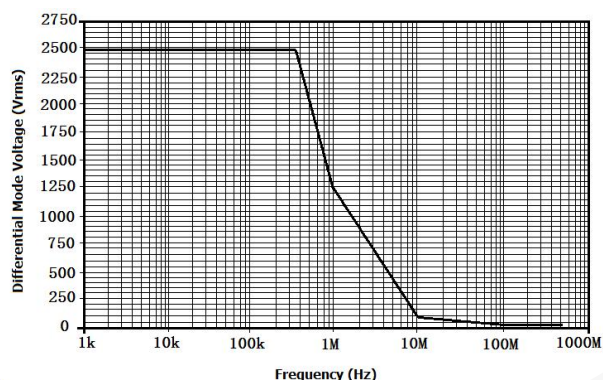


Figure 3:DP6350D Differential Mode Voltage VS Frequency

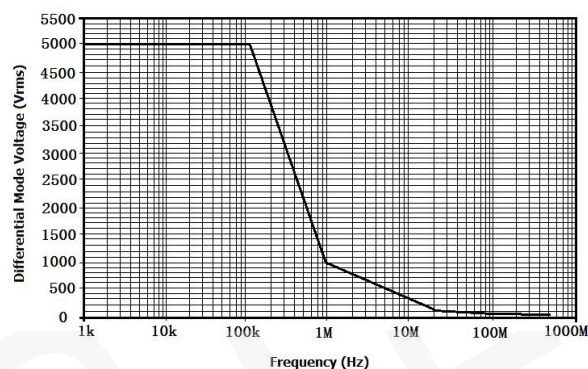


Figure 4:DP6700D Differential Mode Voltage VS Frequency

5.Mechanical Specification

Model	Parameters
Input leads	Approx 28cm
Extender leads(CK-301)	Approx 1m
BNC Output Line(CK-310)	Approx 1m
Alligator clips CK-261	Approx 85*40*17mm
Alligator clips CK-262	Approx 106*43*16mm
Pincer clips CK-281	Approx 152*50*13mm
Hook clips CK-284A	Approx 121*37*20mm
Banana jack CK-293	Approx 31*5.5mm(Φ4mm)
Probe dimensions	Approx 195*58*25mm
Probe weight	Approx 250g

6. Environmental Characteristics









Model	Parameters
Operating temperature	0℃～50℃
Storage temperature	-30℃～70℃
Operating humidity	≤85%RH
Storage humidity	≤90%RH
Operating altitude	3000m
Storage altitude	12000m

7. Operating steps

- ✧ You should estimate the tested voltage amplitude before testing. Please do not use if exceeds the voltage range, or the probe could be damaged.
- ✧ Connect the input lead and output lead to the probe, and then connect the probe to oscilloscope or other instruments.
- ✧ Connect the power adapter to voltage probe, the power indicator light turns on green. Please select proper range based on the tested voltage; when the tested voltage exceeds range, the overload indicator light is on with alarming sound, which can be manually turned off.
- ✧ Please set proper attenuation rate for the oscilloscope or other instruments according to the probe range; and adjust the oscilloscope sensitivity based on the tested voltage.
- ✧ Connect the probe clips based on needs, start after connecting to the circuits to be tested. When testing, the probe body should keep away from high voltage pulse circuits to reduce interference to the probe.
- ✧ Turn off the probe power after the testing is completed, first disconnect the two inputs from the tested points, and then unplug the BNC plug from the oscilloscope.

8. Test Mode (Offset Setting)


User may enter the test mode to adjust offset if the output zero drift. The adjustment method is as follows:

- ✧ Make the input terminals short circuits, and then press these both keys  .
- ✧ Turn power on to start, you will be in test mode while the overload indicator light is on, then release the two keys.
- ✧ The high attenuation factor offset adjustments (corresponding indicator light): press the key  for offset increasing; press  for offset decreasing.
- ✧ After the adjustment, press key  to switch to low attenuation ratio offset adjustment (corresponding indicator light), press key  for offset increasing, press  for offset decreasing.
- ✧ After the above step, press key  to exit the test mode, offset adjustment is completed and the overload indicator light off, entering into normal operation mode.


9. Safety Notices:

Note


- ✧ Please try to wind the input leads when testing, which is better for eliminating noise, to improve the ability of high frequency response.
Please view below for the winding method:

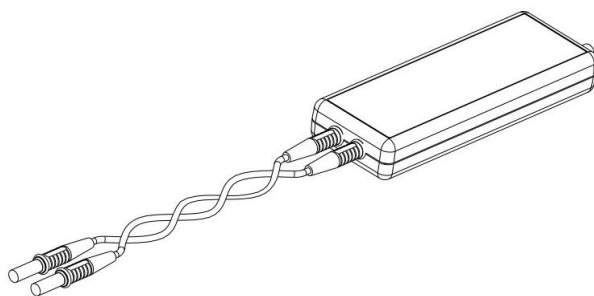

- ✧ It is better not to extend input lead when testing; otherwise it may introduce more noise. If extra extension lead is necessary, please ensure the extension leads are at same length, and the input frequency is under 5MHz, errors may exist if exceeds 5MHz output.

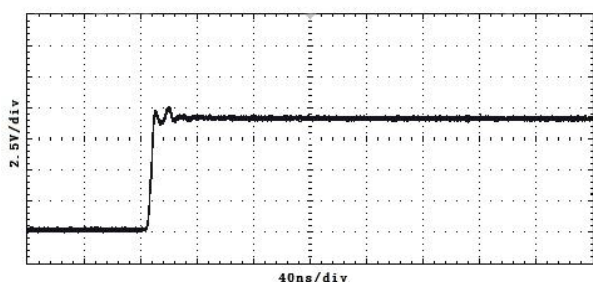

Without extender leads

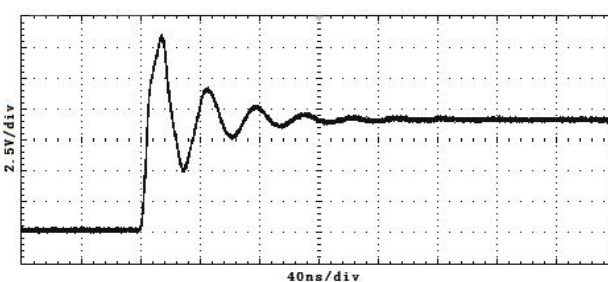

With extender leads

10. Performance Verification

The below operation is for performance verification of the electric specification, requirement for test equipment is shown below:

Equipment	Minimum Requirements	Usages
Oscilloscope	Bandwidth \geq 500MHz; Accuracy \leq 1.5%, e.g. Tektronix MSO/DSO4000	Displays probe output
Standard signal generator; calibrator	Amplitude accuracy \leq 0.75%; rise time \leq 700ps e.g.: FLUKE/WAVETEK 9100	Test bandwidth; AC accuracy; common mode rejection ration
Digital multimeter	Accuracy of not less than 6 and a half e.g.: KEITHLEY 2000	Test the DC accuracy
Insulation pincer clips	Supplied in the accessories	Testing clips
BNC adapter 1	BNC-male-to-female-dual show as Figure 1	Test adapter
BNC adapter 2	BNC-male-to-banana female-dual show as Figure 2	Test adapter
BNC adapter 3	BNC-female-to-dual binding post show as Figure 3	Test adapter
Load terminal	BNC-male-to 50 Ω load show as Figure 4	Signal source load

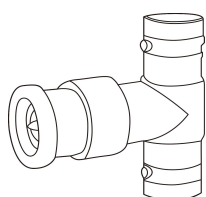


Figure 1 BNC-male-to-female-dual

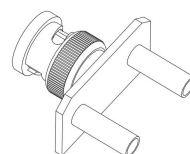


Figure 2 BNC-male-to-banana female-dual

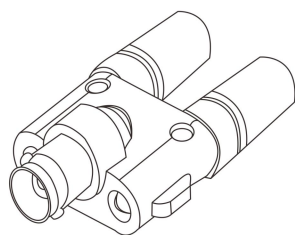


Figure 3 BNC-female-to-dual binding post

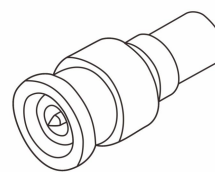


Figure 4 BNC-male-to 50 Ω load

10.1 Setup

- ✧ Connect power adapter to voltage probe, which turns on green light, to ensure accuracy, test the probe index after 20 minutes.
- ✧ Uncover the red black plastic cover of the BNC-male-to-dual binding post.

10.2 DC Accuracy

- ✧ Connect the probe output to the BNC-female-to-dual binding post; plug the two input terminals of the digital multimeter into the binding post hole.
- ✧ Connect the probe input to insulation pincer clips, and then connect the calibrator output and the generator close, connect the red clip to the positive pole, black clip to negative pole.
- ✧ Set the probe attenuation factor in the first gear.
- ✧ Follow the chart below to set output values for the signal source.
- ✧ Enable the signal output, observe and record the output voltage for the attenuation.
- ✧ Close the signal source output.
- ✧ Switch the probe attenuation factor to the second gear.
- ✧ Repeat step 4~6, and calculate whether is within the accuracy ranges.

Model	Attenuation Rate	Signal source output voltage	Probe expected output voltage	Probe practical output voltage
DP6070D	20X	2V	100mV±2mV	
	200X	20V	100mV±2mV	
DP6150D	100X	10V	100mV±2mV	
	1000X	100V	100mV±2mV	
DP6350D	200X	20V	100mV±2mV	
	2000X	200V	100mV±2mV	
DP6700D	200X	20V	100mV±2mV	
	2000X	200V	100mV±2mV	


10.3 Rise Time

- ✧ Configure the fast rise output of the generator for a 50 Ω load. Attach a 50 Ω terminator to the generator fast-rise output and attach the modified BNC adapter to the terminator. Attach the differential probe input leads (without attachment accessories) by sliding the banana plug of the leads onto the binding posts metal sleeves on the modified BNC adapter.
- ✧ Connect the probe output to the oscilloscope, set attenuation factor in the first gear.

- ✧ Refer to the below stable to set standard signal generator.
- ✧ Enable signal source output and record the rise time.
- ✧ Close signal source output.
- ✧ Switch the probe attenuation factor to the second gear.
- ✧ Repeat step 3~5, and calculate whether is in the range.

Model	Attenuation Rate	Signal source voltage, frequency setting	Expected probe rise time	Rising time
DP6070D	20X	20Vp-p 500MHz	$\leq 700\text{ps}$	
	200X			
DP6150D	100X			
	1000X			
DP6350D	200X			
	2000X			
DP6700D	200X			
	2000X			

Note: in order to reduce waveform oscillation while reaching the maximum bandwidth, please apply banana jack. Users can solder the banana jack onto the PCB board or the pins of the MOSFET under test as shown below:

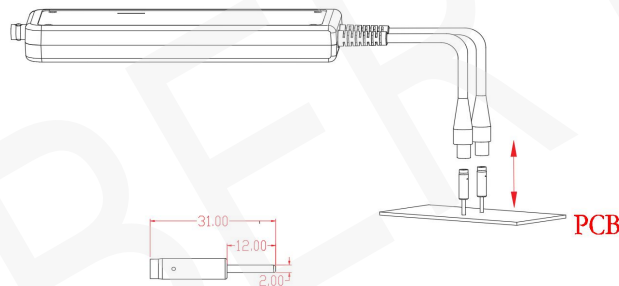

10.4 DC Common Mode Rejection Ration(CMRR)

- ✧ Set DP6000D series probes at low attenuation ration, respectively (20X, 100X, 200X).
- ✧ Set 500V DC voltage for signal source, now the voltage output shut up.
- ✧ Connect the two probe inputs to 500V voltage.
- ✧ Connects the probe output to BNC-female- to- dual binding post (as shown in Figure 3), and plug into the two inputs of the digital multimeter.
- ✧ Enable signal source output, respectively record voltage output values; check with the following chart to calculate whether is within the ranges.
- ✧ Close the calibrator after completion of the test.

Model	Attenuation Rate	Probe expected output voltage	Probe practical output voltage
DP6070D	20X	$\leq 1\text{mV}$	
DP6150D	100X	$\leq 1\text{mV}$	
DP6350D	200X	$\leq 1\text{mV}$	
DP6700D	200X	$\leq 1\text{mV}$	

Note: High voltage 500 V is used during the testing, please pay attention to personal safety;

to reduce voltage fluctuation, be sure to make the calibrator output 500 V high voltages after the completion of all connections.

11. Care and Maintenance

- ✧ Keep the probe clean and dry.
- ✧ Please wipe with soft dry cloth when clean needed, must not use chemicals to clean.
- ✧ Please put the probe in the package provided, and put it in cool, clean and dry places.
- ✧ Please put the probe in the package provided to prevent shock.
- ✧ Do not forcefully pull the input and output lead to prevent bending, twisted and folding.

12. Warranty

Please refer to the warranty instruction.

13. Packaging

Package				
Items	DP6070D	DP6150D	DP6350D	DP6700D
Voltage probe body	1 unit	1 unit	1 unit	1 unit
USB 5V/1A Adapter(CK-605A)	1 unit	1 unit	1 unit	1 unit
Alligator clips (CK-261)	1 pair	1 pair	1 pair	--
Alligator clips (CK-262)	--	--	--	1 unit
Insulation pincer clips (CK-281)	1 pair	1 pair	1 pair	1 pair
Hook clips (CK-284A)	1 pair	1 pair	1 pair	1 pair
Extension cord (CK-301)	1 pair	1 pair	1 pair	1 pair
Output lead(CK-310)	1 pcs	1 pcs	1 pcs	1 pcs
Banana jack(CK-293)	2 unit	2 unit	2 unit	2 unit
USB connecting line (CK-315B)	1 pcs	1 pcs	1 pcs	1 pcs
User manual	1 book	1 book	1 book	1 book
Warranty card	1 unit	1 unit	1 unit	1 unit
Testing report	1 pcs	1 pcs	1 pcs	1 pcs
Thorough type 50Ω load(CK-50)	1 unit	1 unit	1 unit	1 unit

NOTE: The above "--" refers to non-standard accessory of this model

CYBERTEK

SHENZHEN ZHIYONG ELECTRONICS CO., LTD.

Addr: Room A1702, Building 4, TianAn Cyber Park, HuangGe Road, LongGang

District, ShenZhen City, China

Tel: (86) 400 852 0005 / (86 755) 86628000

Q Q: 400 852 0005

Email: cybertek@cybertek.cn

Url: <http://www.cybertek.cn>

© Zhiyong Electronics, 2024

Published in China, Sept. 1, 2024